 


# Assembly Instructions

## CM7977CK/EK

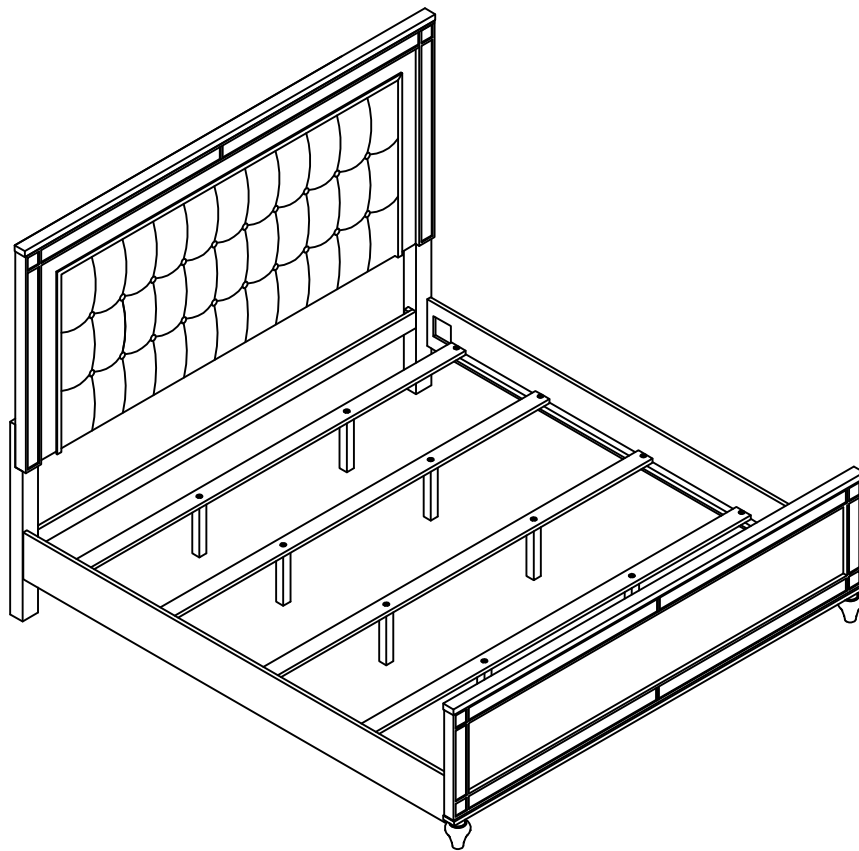

### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

### Tools Required For Assembly:

Allen Wrench



(Included)

Wrench

 


(Included)

Phillips Screwdriver



(Not Included)

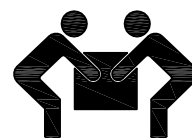


2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

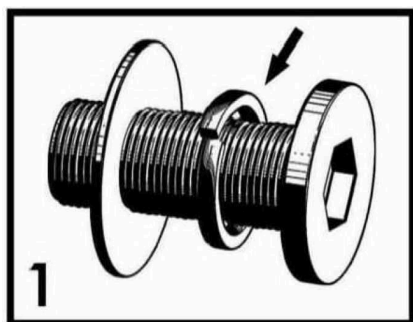


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

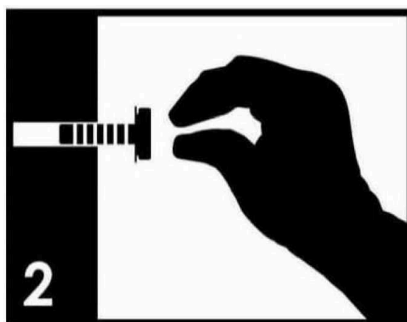

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

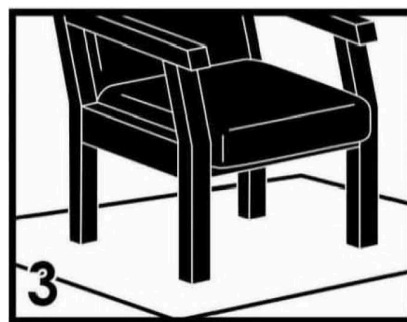


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

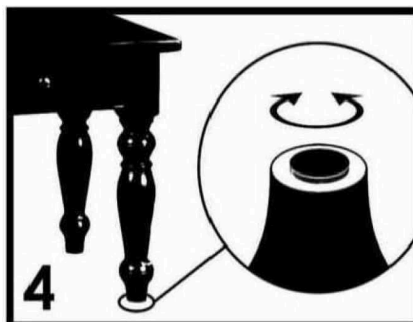

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

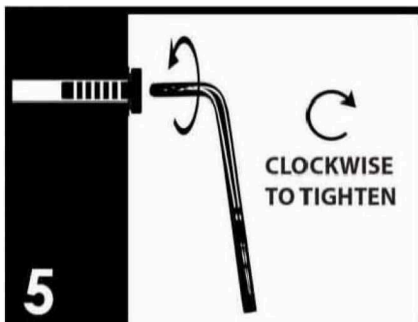


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

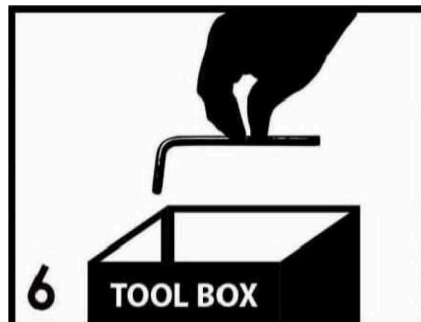


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

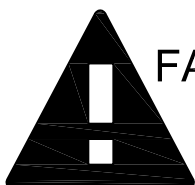

 

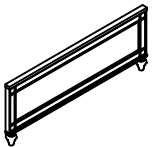 
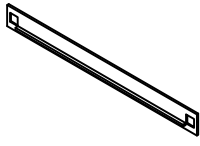 


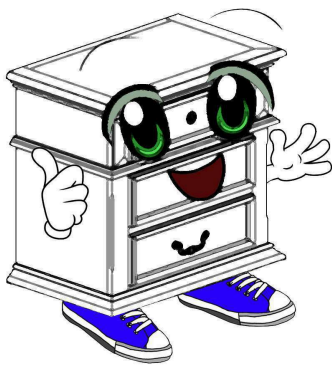
**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**











Before you begin, please read Page 2 of "Assembly and Care Advice".

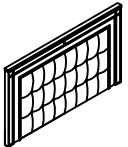 And remember, do not tighten until each step is completed or instructed.

## Parts List

	#1 x 1pc Headboard Panel
	#2 x 2pcs HB Leg (L&R)
	#3 x 1pc Footboard
	#4 x 2pcs Side Rail
	#5 x 1pc Headboard Support
	#6 x 4pcs Bed Slat
	#7 x 8pcs Ø1/4" Support Leg 30 x 30 x 230mm

    
## Hardware List

  	#A x 10pcs Bolt Ø5/16" x 1-3/4"
	#B x 10pcs Lock Washer Ø5/16"
	#C x 10pcs Flat Washer Ø5/16"
	#D x 1pc Allen Key 4mm
	#E x 8pcs Screw #4 x 1-3/16"
	#F x 8pcs Threaded Pins Ø5/16" x 3-1/2"
	#G x 8pcs Hex Nut Ø5/16"
	#H x 1pc Wrench 14mm




Prepare 10 bolts assembly by inserting lock washer (#B), then flat washer (#C) onto bolts (#A).  
Align headboard legs (#2R/L) to the holes of the headboard (#1), then secure with bolts (#A).

#A x 10pcs  
#B x 10pcs  
#C x 10pcs

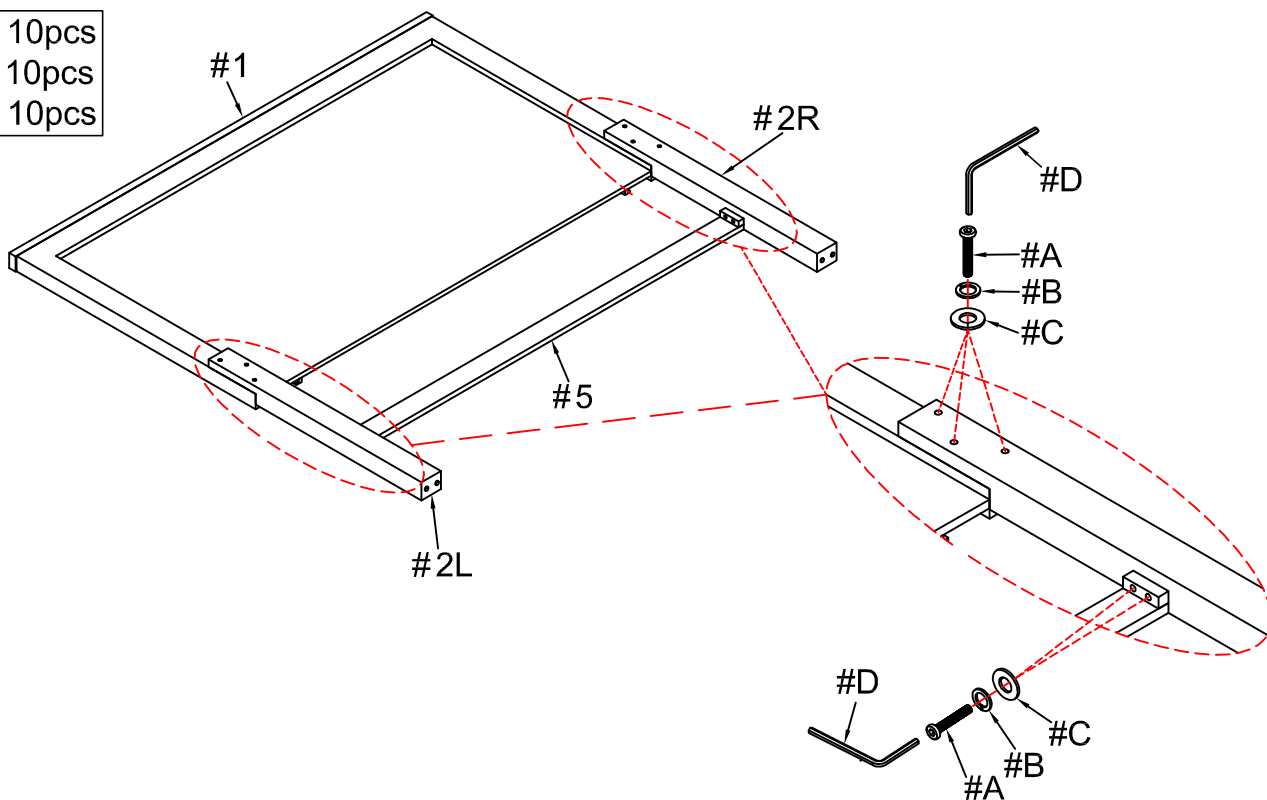 

Insert the threaded pins (#F) to the holes of the headboard (#1) and footboard (#3). Align side rails (#4) to the threaded pins (#F) that are attached to headboard (#1) and footboard (#3). Secure with hex nut (#G).


#F x 8pcs  
#G x 8pcs

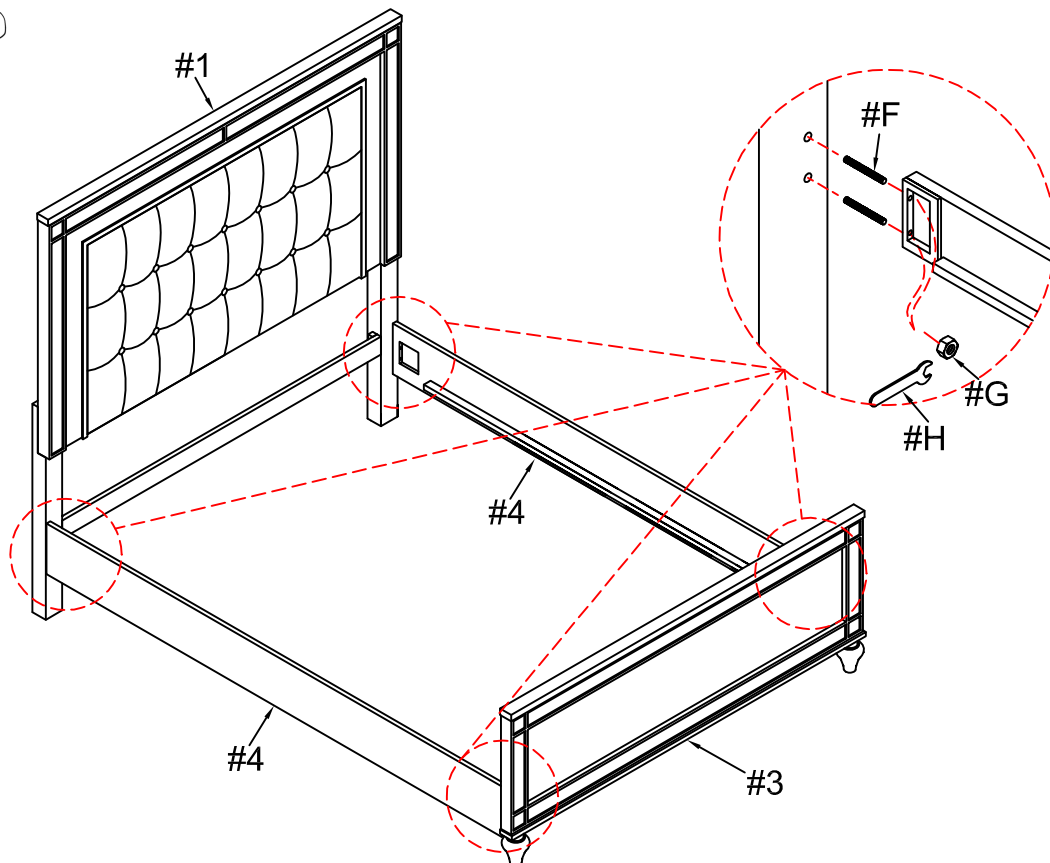 



#3

 Attach support legs (#7) to each slats (#6). Adjust the adjustable foot on the support legs (#7) according to ground level.

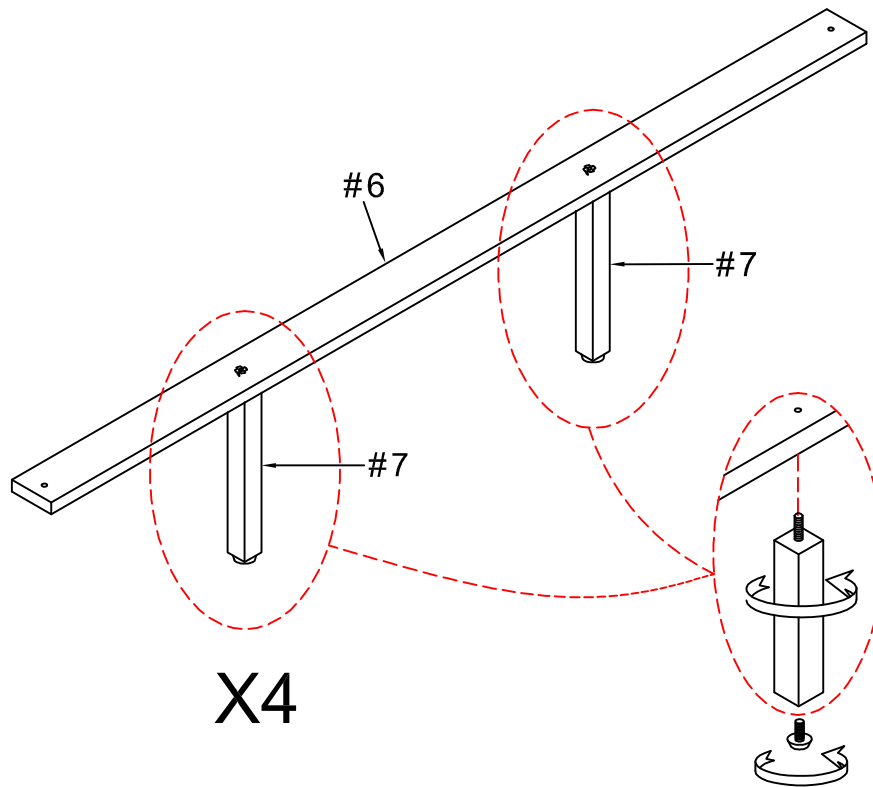

X4



#4

Align bed slats (#6) to the side rails (#4), then secure with screws (#E).

#E x 8pcs

