 


Assembly Instructions

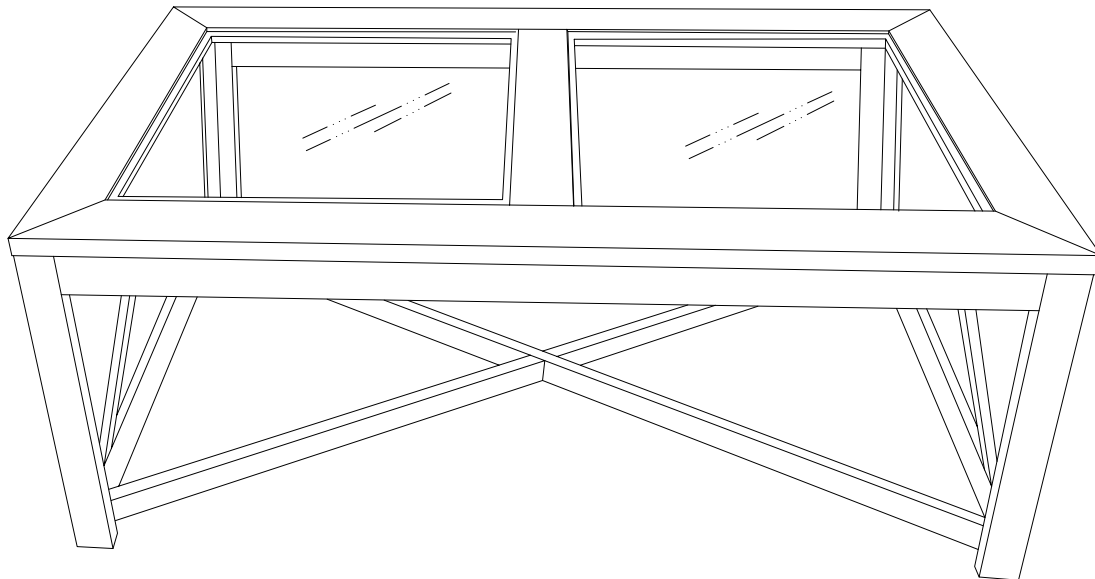

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench




(Included)

Phillips Screwdriver



 (Not Included)

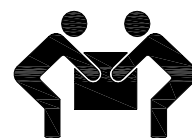


2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

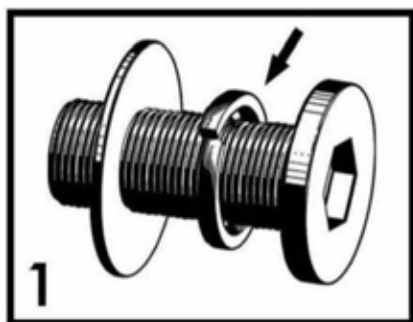


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

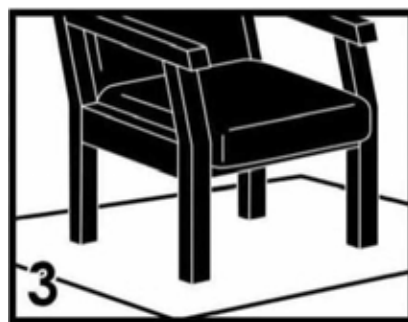

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

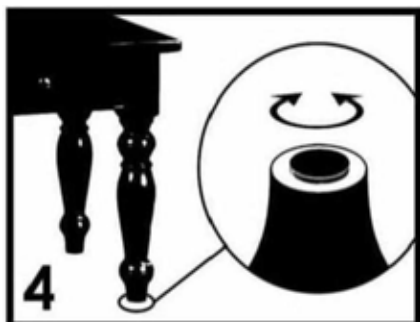

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

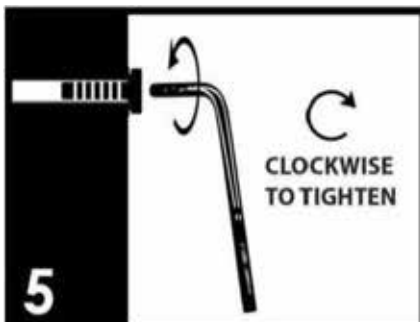


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

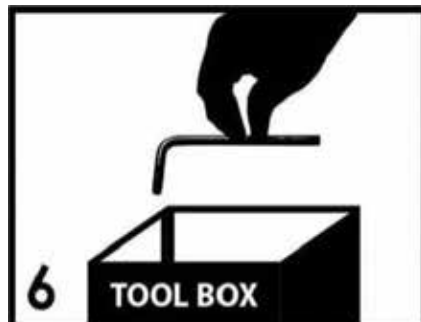

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

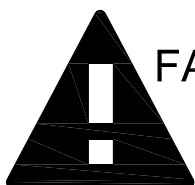


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

 
And remember, do not tighten until each step is completed or instructed.



#1 x 1pc
Coffee Table Top

 


#2 x 2pcs
Coffee Table Leg

 


#3 x 1pc
Table Leg Support A


 
#4 x 1pc
Table Leg Support B



#5 x 2pcs
Glass

 

#A x 1pc
Allen Wrench M4



#B x 8pcs
Bolt Ø1/4"X2-1/4"



#C x 8pcs
Lock Washer Ø1/4"



#D x 8pcs
Flat Washer Ø1/4"



#E x 5pcs
Screw Ø8X1-1/4"

 


#F x 4pcs
Wood Dowel Ø8X30m/m




Align leg support (#4) to the center hole of the leg support (#3). Secure with screw (#E), then insert wood tenon (#F) on each end of the leg support.

#E x 1pc
#F x 4pcs

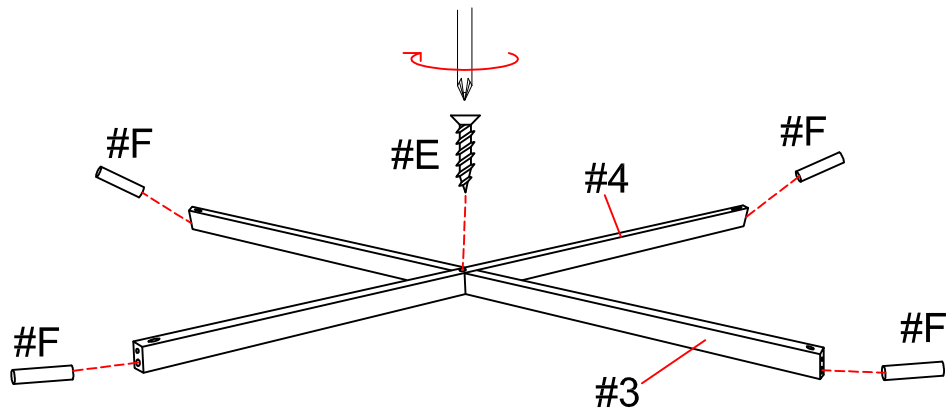


Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#B). Align coffee table leg (#2) to the holes of the table top (#1). Secure with bolts (#B).

#B x 4pcs
#C x 4pcs
#D x 4pcs

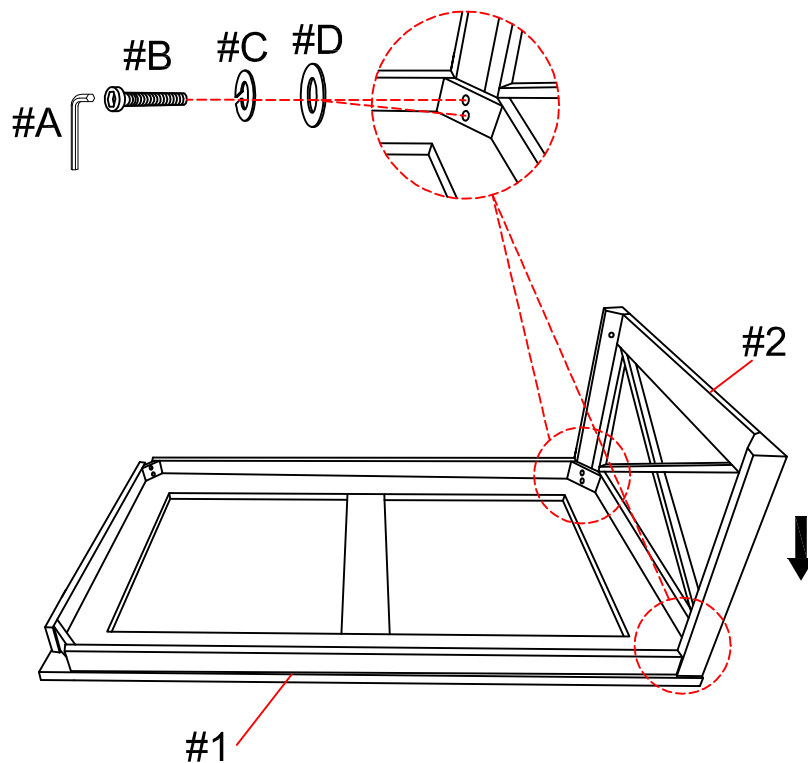 




 Align leg supports (#3,4) to the holes of the secure legs (#2), then align other leg (#2) to the holes of the leg support (#3,4) and table top (#1)

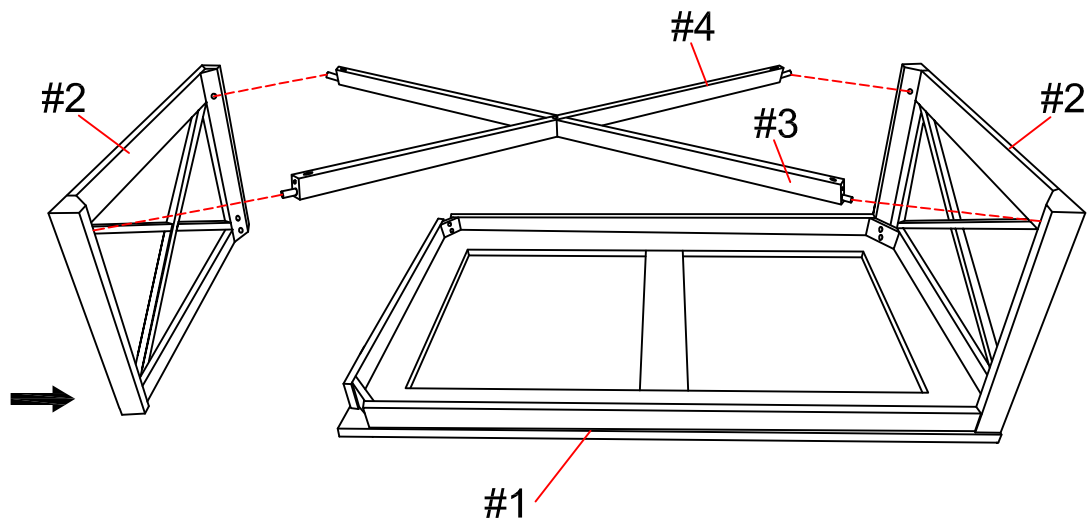


2) Secure leg supports (#3,4) to legs (#2) with screw (#E).

#B x 4pcs
#C x 4pcs
#D x 4pcs
#E x 4pcs

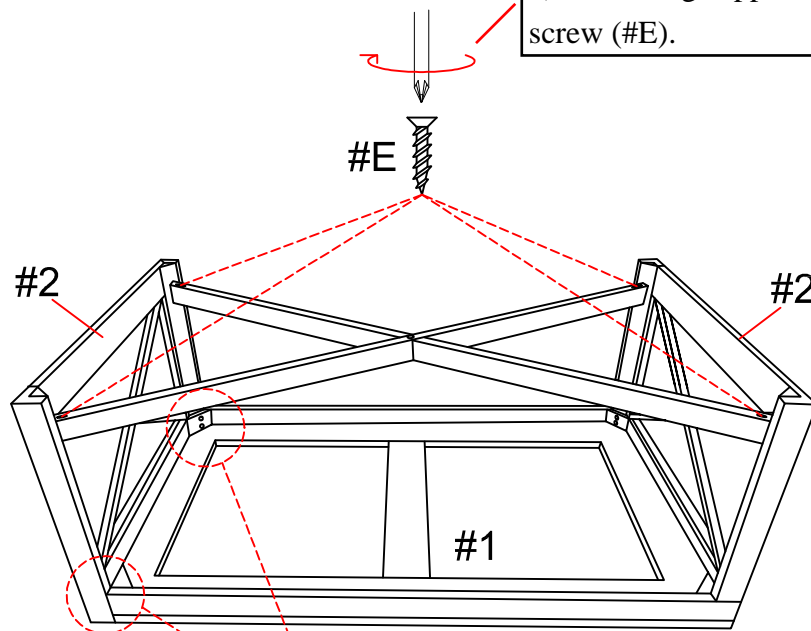 


 1) Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#B). Secure legs (#2) to table top (#1) with bolts (#B).

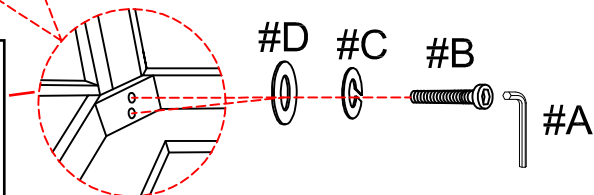



Place glass (#5) carefully onto table.

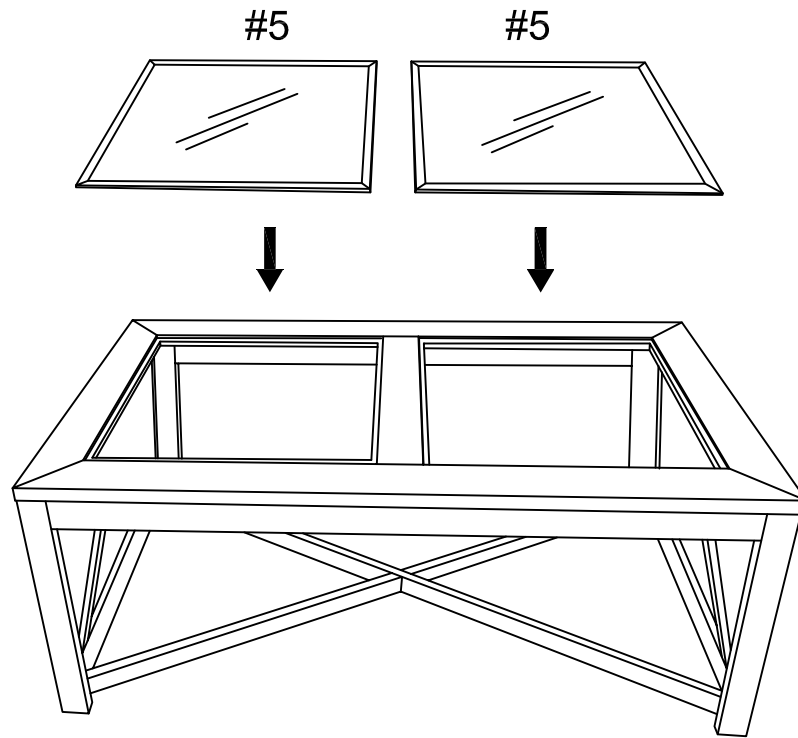 

Assembly Completed

