


# ASSEMBLY INSTRUCTIONS CONSOLE

## PARTS | Check that you've received all parts listed below.

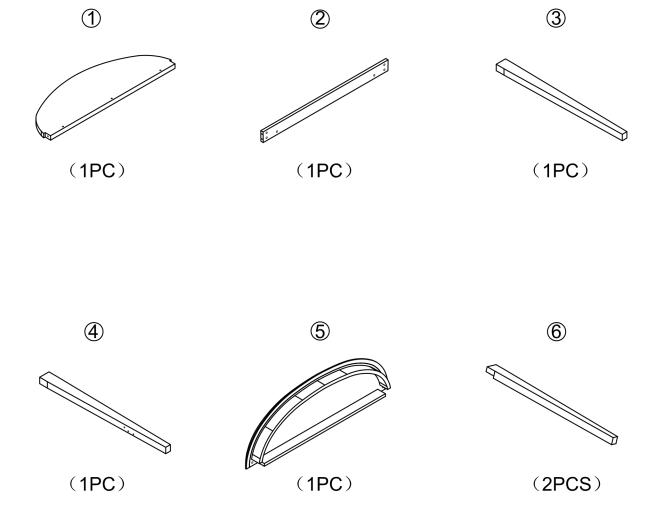

#### HARDWARE

Check that you've received all parts listed below.




















 $\bigoplus$ 

















#### STEP 1


Remove protective materials and set parts on a flat, non-abrasive surface. Identify all parts packed in the carton against the parts list. Do not attempt to assemble the table if any parts are missing or damaged.

- A. Tighten screws F and insert wood dowel H into shelf 1.
- B. Place support bar 2 onto shelf 1 via corresponding holes. NOTE: Camlock holes on support bar 2 face the edge of shelf 1.
- C. Insert camlocks G into support panel 2 and turn clockwise to lock.

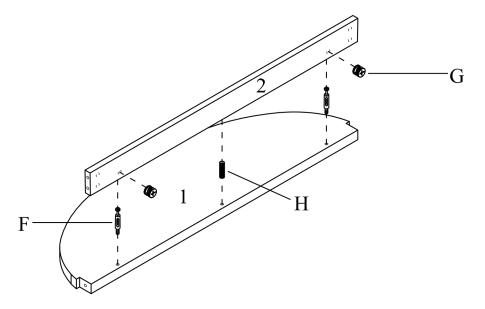


#### STEP 2

- A. Tighten screws F to legs 3 and 4 then insert legs to corresponding holes of the shelf unit 1.
- B. Insert camlocks G into shelf unit 1 and turn clockwise to lock.

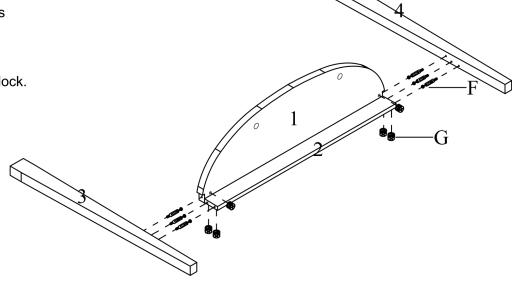


#### STEP 3

- A. Tighten bolt B into top panel 5. Insert top panel 5 into corresponding holes of leg 3 and 4.
- B. Insert half circle piece of lock C into leg 3, then the washer, then nut D as pictured.
  Tighten nut D using wrench J. Cover with cap cover E.
- C. Repeat step B with leg4.

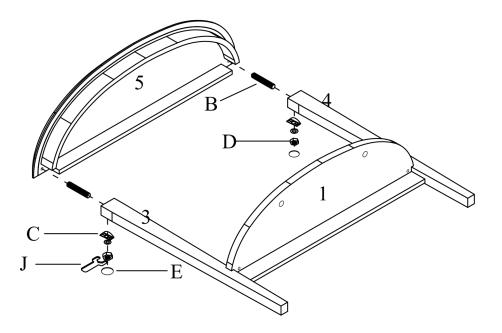


#### STEP 4

- A. Tighten bolt B into leg 6. Insert leg 6 into corresponding holes of shelf 1.
- B. Attach leg 6 to top panel 5 with screw A.
- C. Insert half circle piece of lock C shelf unit 1 then the washer, then nut D as pictured.
  Tighten nut D using wrench J.
- D. Push foot pad I into legs 3, 4, and 6 using thumb or slight tap into with a soft mallet.

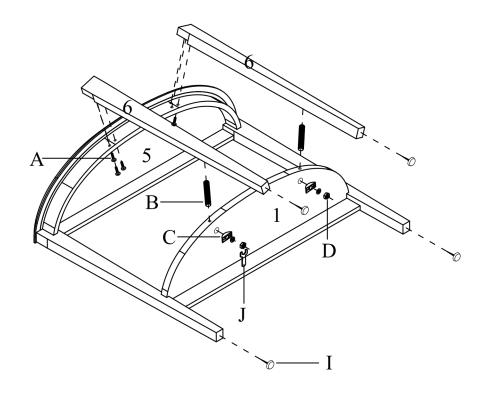


#### STEP 5

- A. Find a spot on a wall 1" below the top of the item.
- B. Using a drill bit slightly thinner than anchor N, drill a hole into the drywall.

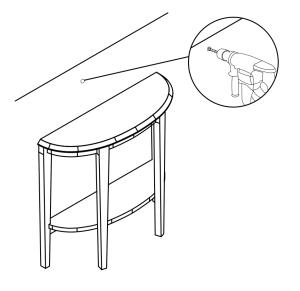


#### STEP 6

- A. Use a light hammer to tap anchor N into the hole.
- B. Anchor N should fit snugly. If the hole is too small, drill again to increase the hole size on the wall. Do not force anchor N into the wall.

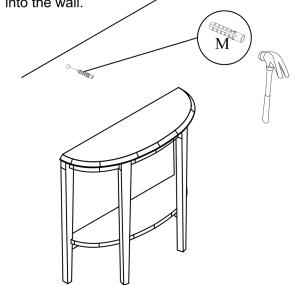


#### STEP 7

- A. Insert drywall screw M into bracket L, then into anchor N and tighten.
- B. Insert screw K into bracket L then tighten to back of top panel 5.

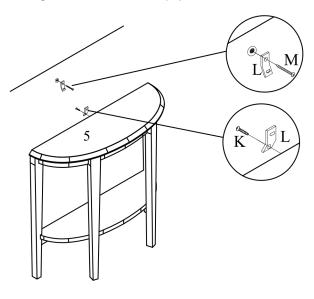

#### STEP 8

- A. Insert the end of strap O through bracket L attached to the wall, then through bracket L attached to the item and back through the head of strap O.
- B. Pull lightly on strap O until the strap stops. Your console is now ready to use.

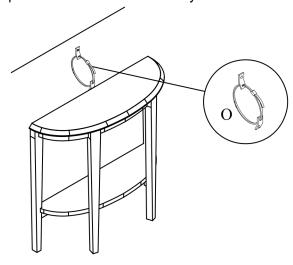

### Need some help?



We recommend the following care for the best results:

- - Avoid dragging along floors. Always lift when moving
- - Clean spills immediately by blotting with a clean sponge or towel
- - Dust or wipe with a soft, dry cloth.
- - Avoid harsh chemicals or excessive moisture.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.