



**GM-2002-2PK**

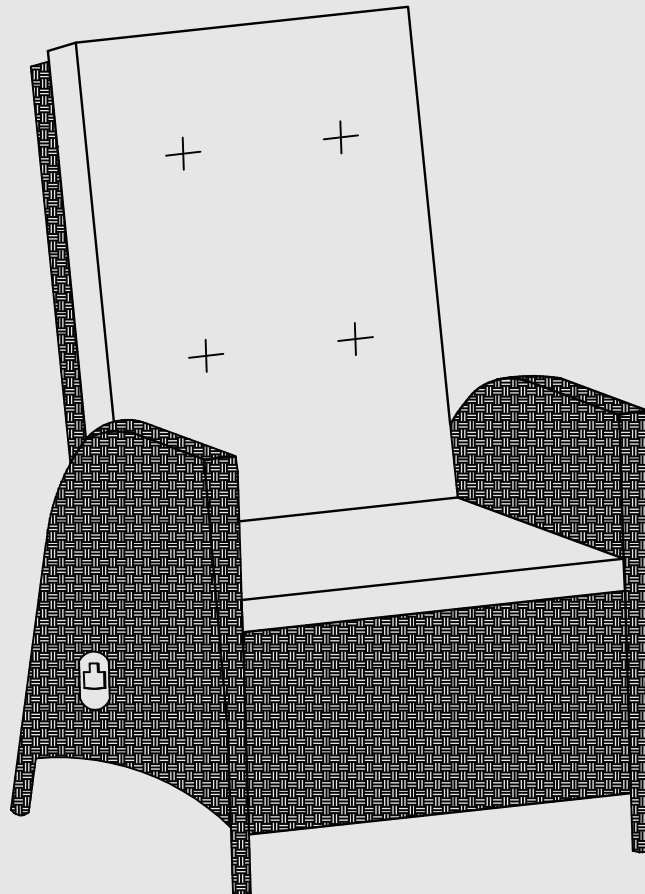

Garda Reclining Chair


## PARTS

A

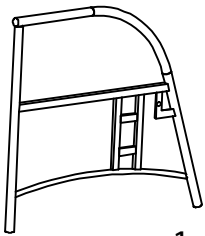


1 pc

A1

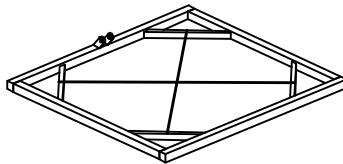


1 pc

A2

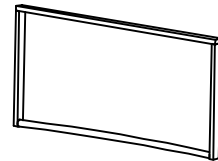


1 pc

A3

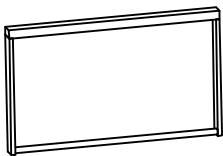


1 pc

A4

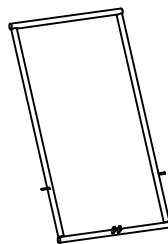


1 pc

A5

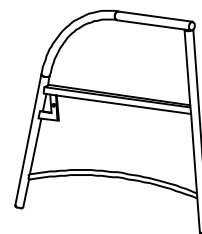


1 pc

A6

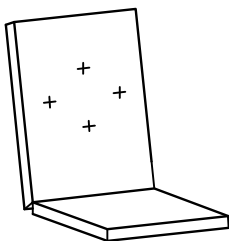


1 pc



1 pc

## HARDWARE


1



8 pcs

M6 x 40

2



4 pcs

M6 x 30


3



12 pcs

M6


4



2 pcs


M8 x 45

# HARDWARE

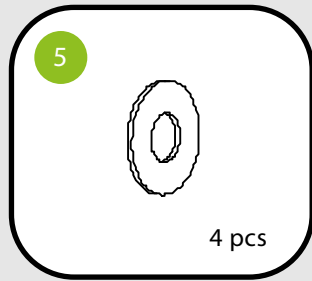


M8

4 pcs

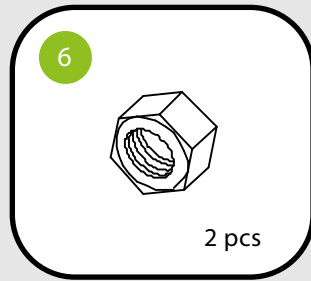


M8

2 pcs

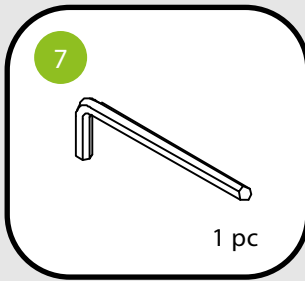


1 pc

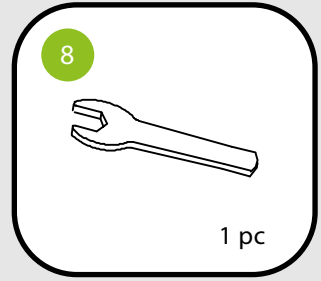


1 pc


## ASSEMBLY INSTRUCTIONS

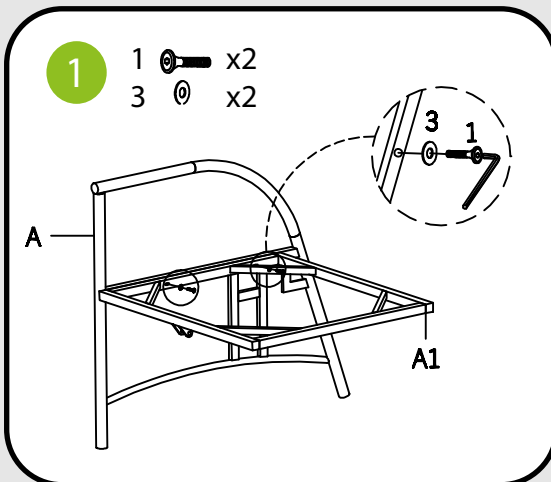


Align Arm (A) with Seat (A1). Secure washer (3) and bolt (1) with supplied Allen key (7).

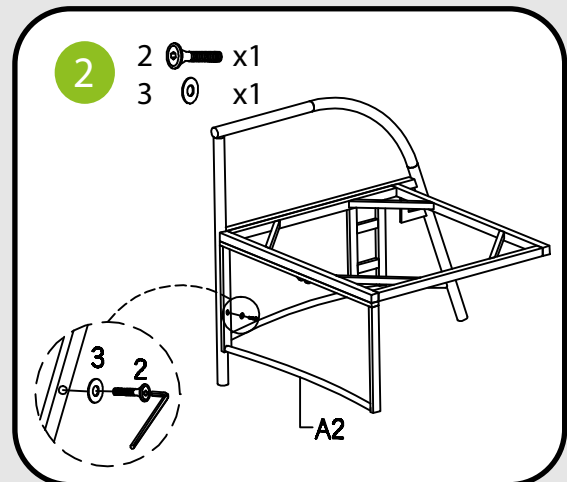

Align Front Panel (A2) with Arm (A). Secure washer (3) and bolt (2) with supplied Allen key (7).

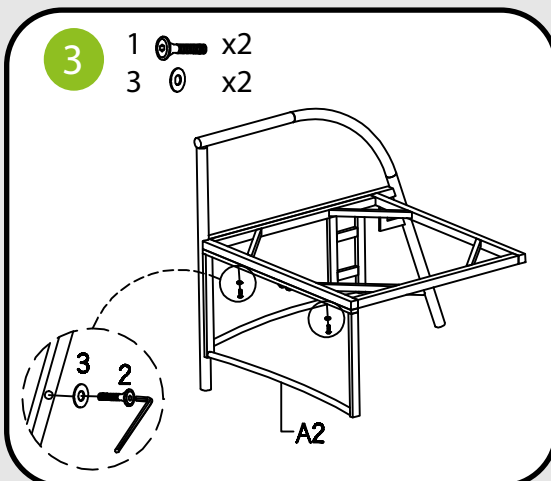


Align with Seat (A1). Secure washer (3) and bolt (1) with supplied Allen key (7).

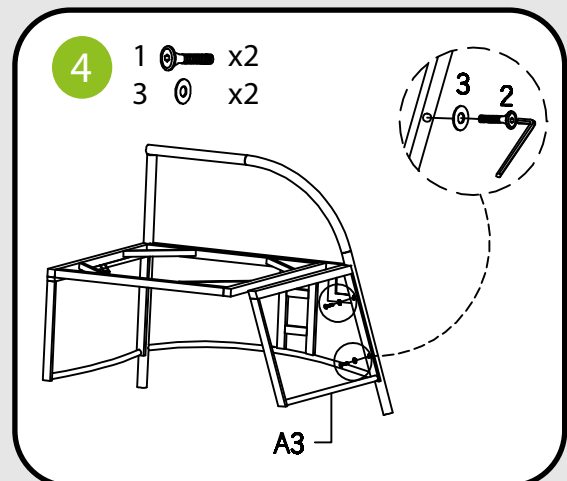

Align Back Panel (A3) with Seat (A1). Secure washer (3) and bolt (1) with supplied Allen key (7).


# ASSEMBLY INSTRUCTIONS

5

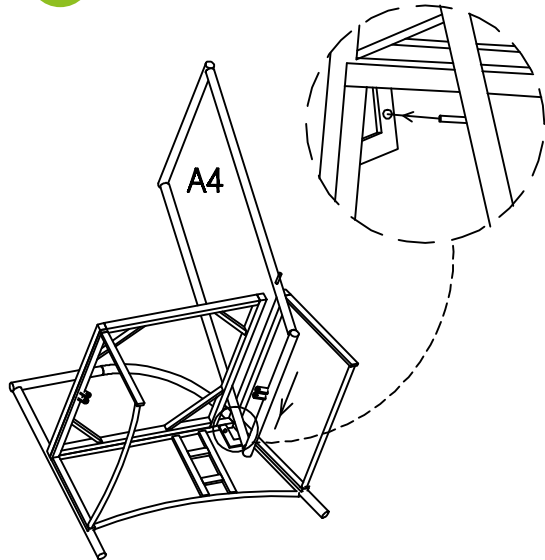

Place arm side down. Align Back Frame (A4) with attached pin.


6

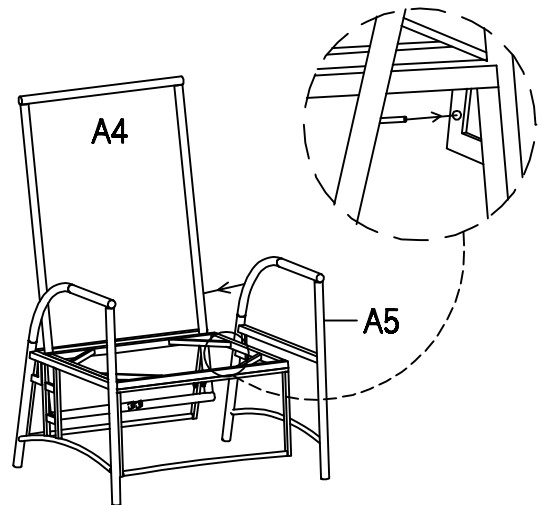

Align Arm (A5) with the attached pin of Back Frame (A4).

7


1 x2  
3 0 x2

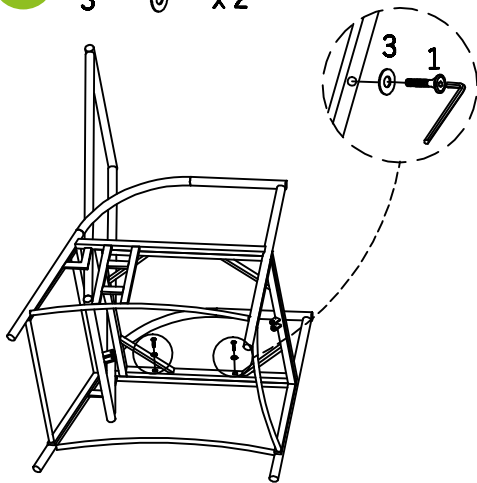

Place Arm (A5) side down. Secure Seat (A1) using washer (3) and bolt (1) with supplied Allen key (7).


8

2 x3  
3 0 x3

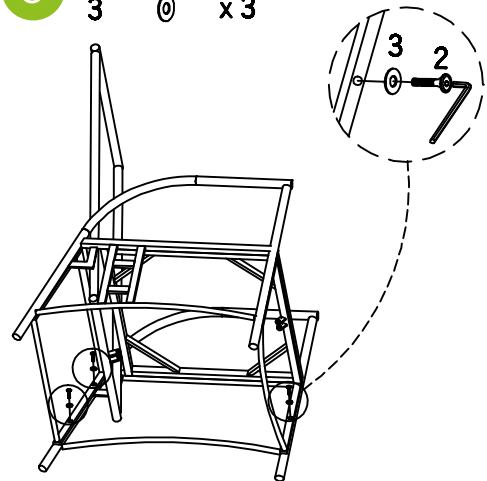


Secure Front Panel (A2) using washer (3) and bolt (2) with supplied Allen key (7).


# ASSEMBLY INSTRUCTIONS

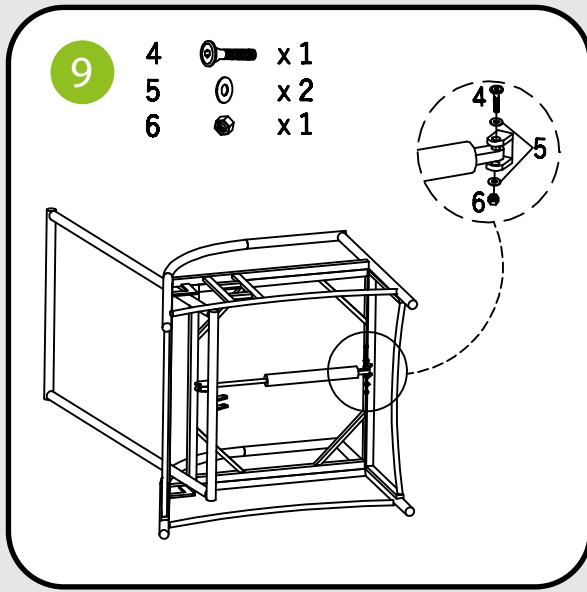

Align Gas Lift in center of Seat (A1). Secure front end using washer (5) and bolt (4). Tighten hex nut (6) on end with supplied wrench (8).

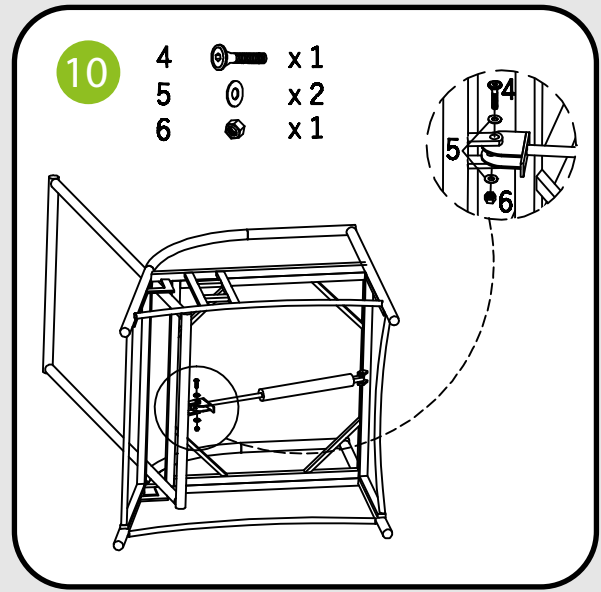

Secure back end using washer (5) and bolt (4). Tighten hex nut (6) on end with supplied wrench (8).

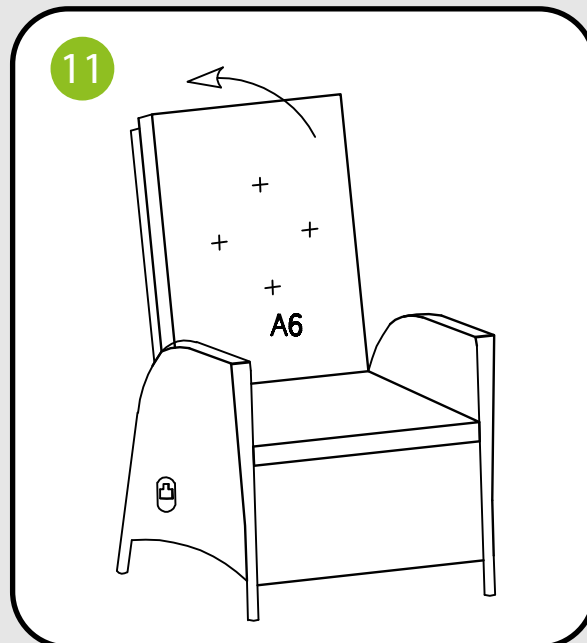

Place Cushion (A6) on top. Use attached seat strings to secure.



To recline, pull side lever.